

LUMEN FOCUS RCLS4 INSTALL INSTRUCTIONS

WARNING - RISK OF FIRE OR ELECTRIC SHOCK.

INSTALL THIS KIT ONLY IN LUMINAIRES THAT HAVE THE CONSTRUCTION FEATURES AND DIMENSIONS SHOWN IN THE PHOTOGRAPHS AND / OR DRAWINGS AND WHERE THE INPUT RATING OF THE RETROFIT KITS DOES NOT EXCEED THE INPUT RATING OF THE LUMINAIRE.

WARNING - TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR OTHER SHARP OBJECTS.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK.

LUMINAIRE WIRING AND ELECTRICAL PARTS MAY BE DAMAGED WHEN DRILLING FOR INSTALLATION OF LED RETROFIT KIT. CHECK FOR ENCLOSED WIRING AND COMPONENTS.

CAUTION: DO NOT MAKE OR ALTER ANY OPEN HOLES IN THE ENCLOSURE OF WIRING OR ELECTRICAL COMPONENTS DURING KIT INSTALL.

WARNING - RISK OF FIRE, ELECTRIC SHOCK, OR PERSONAL INJURY. BEFORE INSTALLATION TURN POWER OFF.

WARNING - RISK OF FIRE OR ELECTRIC SHOCK, LED RETROFIT KIT INSTALLATION REQUIRES KNOWLEDGE OF LUMINAIRES ELECTRICAL SYSTEMS. IF NOT QUALIFIED DO NOT ATTEMPT INSTALLATION. CONTACT A QUALIFIED ELECTRICIAN.


REMOVAL PROCESS

1. TURN OFF POWER
2. REMOVE LAMPS (RECYCLE AS NEEDED)
3. REMOVE BALLAST COVER
4. REMOVE SOCKETBARS, BALLAST, AND ANY EXCESS WIRING FROM STRIP

INSTALL PROCESS

1. CONNECT POWER TO DRIVER USING SUPPLIED QUICK DISCONNECT.
2. SLIDE RCLS4TRAY OVER THE STRIP FIXTURE.
3. USING ITEMS 02 AND 03, SECURE TRAY AROUND THE FIXTURE.
4. TURN POWER BACK ON.

PARTS LIST FOR RTL KIT		
LINE NO.	QTY	PART NAME
01	1	RCLS4 TRAY
02	2	1/4"-20 X 5-1/4" CARRIAGE BOLT
03	2	1/4"-20 WING NUT

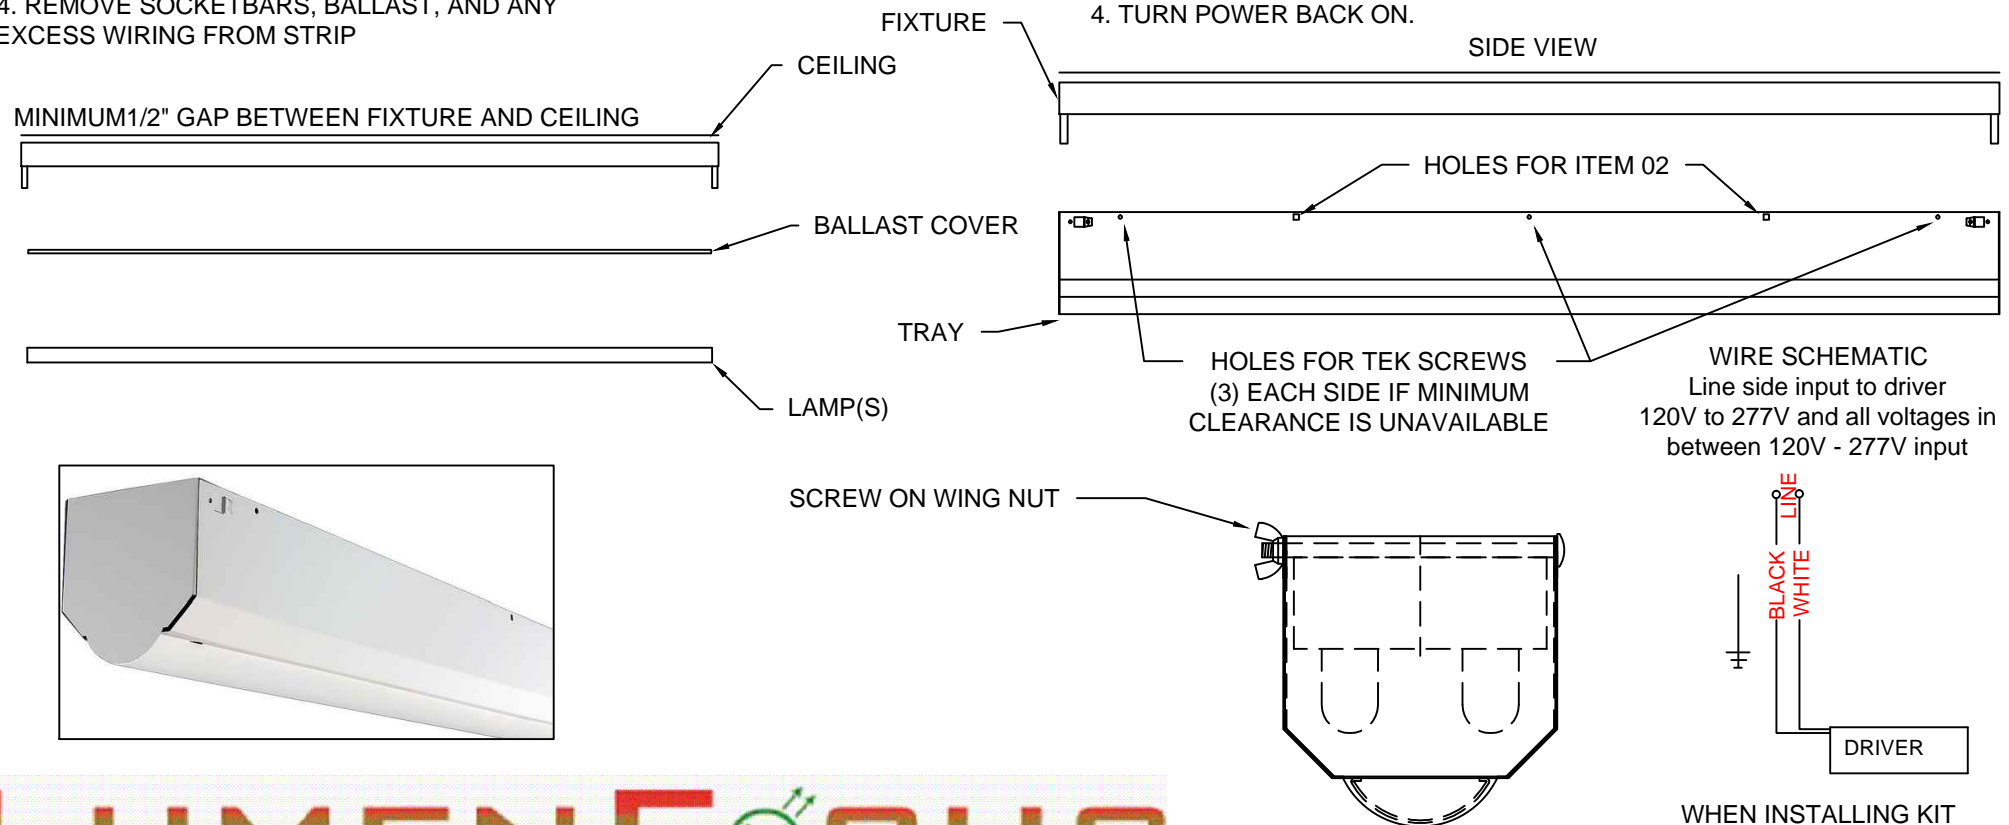

WHEN INSTALLING KIT
MAINTAIN EXISTING GROUND
ON THE FIXTURE